

SAWDUST to Sequins



\$25 Console Table!


Copyright© 2015 Sawdust to Sequins

Materials

Tools


3- 2x4x8	Kreg Jig
1- 1x6x12	Drill
Sandpaper	Saw (to cut boards to length)
Screws (pocket hole and wood)	Tape measure
Stain of your choice	Drill bits (Kreg bits and phillips head)

Cut List

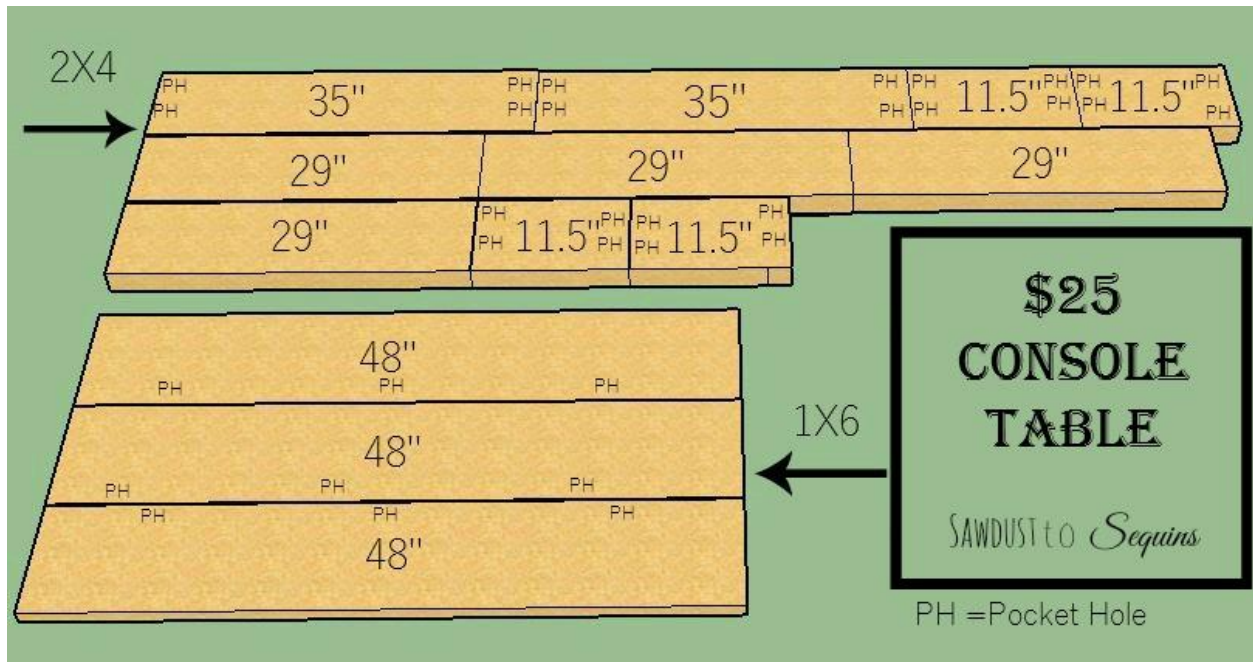


Step 1

Attach the 11.5" pieces to the 29" pieces to form a box. (11.5" pieces go inside of 29" pieces. Repeat for both legs of the table.

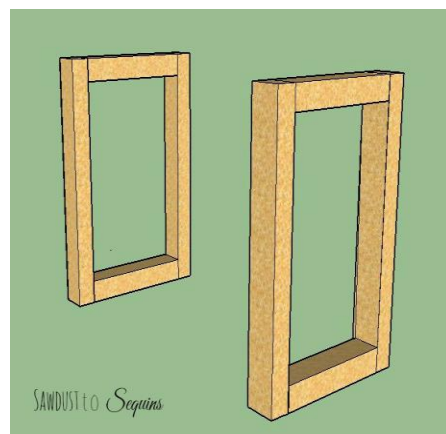


Step 2

With legs facing each other, attach middle 35" braces to the tops of the front and back (braces are placed inside of table legs components).

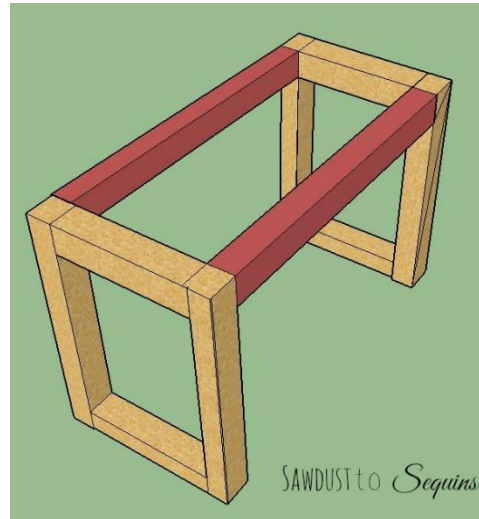

Step 3

With pocket hole screws, screw the 3 1x6x4 boards together to form the top of the table.

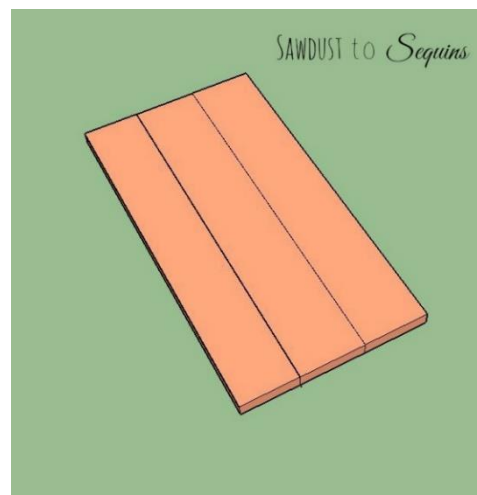

Step 4

Attach the top to the table legs with 2" wood screws through the bottom of the leg assembly. Sand your table, stain with color of choice, and enjoy your build!

