


SAWDUST to Sequins

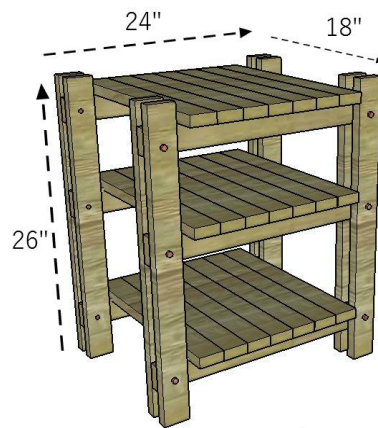

SAWDUST to Sequins

Arhaus Inspired End Table

Copyright © 2015 Sawdust to Sequins

Tools

Saw to cut boards to length

Pocket Hole Jig

Drill

Sander for finishing wood

Supplies

1 ¼" Pocket Hole Screws

Sandpaper

3/8" spade bit

6 -3/8-in-16 x 3-in bolts

6-3/8-in-16 hex nuts


6-3/8-in x 7/8-in flat washers

Paint or stain

1 ¼" wood screws

Optional: Spray paint for bolts, washers, and hex nuts if they are not available in the color of your choice. If spraying, do this before assembling the table. Give the paint plenty of time to dry.

CUT LIST

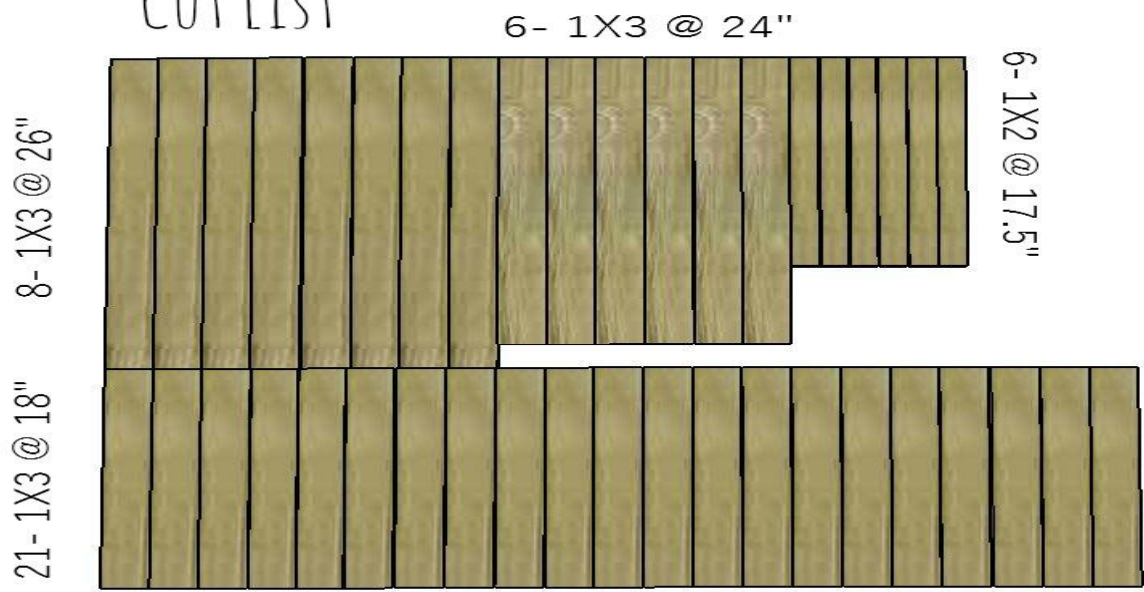

SAWDUST to *Sequins*

Step 1


Cut boards according to cut list and drill holes in the 8- 1X3's @ 26" and the 6-1X3's @ 24". Use the 3/8" spade bit for this step.

○ = holes drilled with 3/8" spade bit


Holes 1.25" from side and end.

Holes are 1.25" from side and

4.5" from top of board 14.5" from top of board 22.75" from top of board

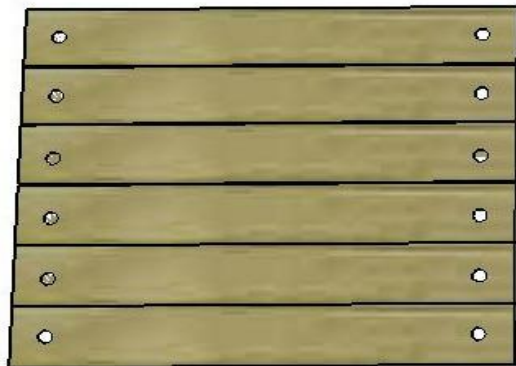

1X3 @ 24"

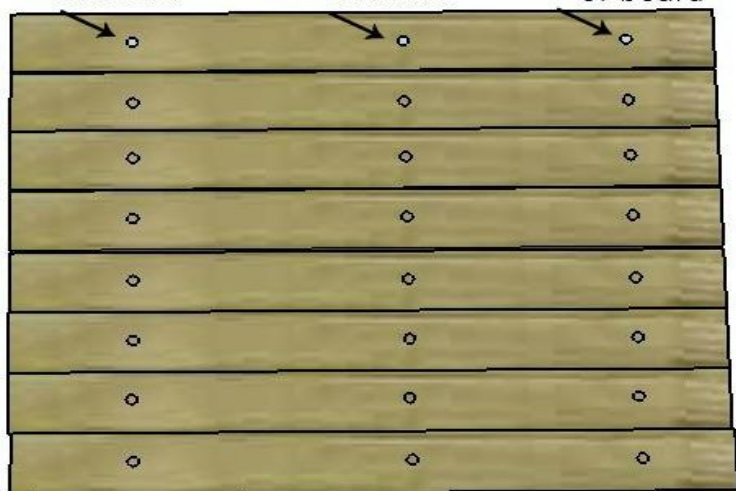

1X3 @ 26" SAWDUST to *Sequins*

Step 2

Drill pocket holes in the 6- 1X3 @ 24". This is what the shelf boards will attach to. You will only need two pocket holes per board to support the shelf board sections.

↑ = Pocket Holes




SAWDUST to Sequins

Step 3

Completely sand your boards and paint or stain. This is very difficult to do once the table is assembled.

Step 4

Take 2- 1X2 @ 17.5" boards and lay across 7- 1X3 @ 18" boards and screw together with 1 ¼" wood screws. Make three of these.

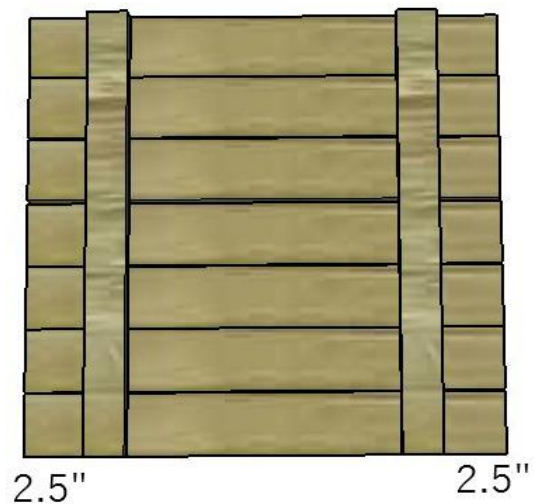

SAWDUST to Sequins

Step 5

Place 3-1X3 @ 24" between 2- 1X3 @ 26"
Secure with a bolt, washer, and hex nut. The
holes drilled with the spade bit will be the
placement of the boards.
tighten nuts to ensure stability of
the table.



SAWDUST to *Sequins*

Step 6

Repeat step 5 to make another table leg unit.



SAWDUST to *Sequins*

Step 7

Take the shelf sections you have already assembled from step 4 and attach to the leg units with pocket hole screws.

The shelf units should hang over 1" on each side.

*If some of your nuts and bolts have unpainted surfaces, spray paint on a foam or craft brush and wipe on. Allow adequate time to dry.



SAWDUST to *Sequins*

Have fun with this build and visit me @ [SawdusttoSequins.com](https://www.SawdusttoSequins.com) for more plans!!

Follow along on [Pinterest](#) and [Instagram](#) for my latest projects and behind the scenes pics of my builds.