
SAWDUST to Sequins and everything in-between

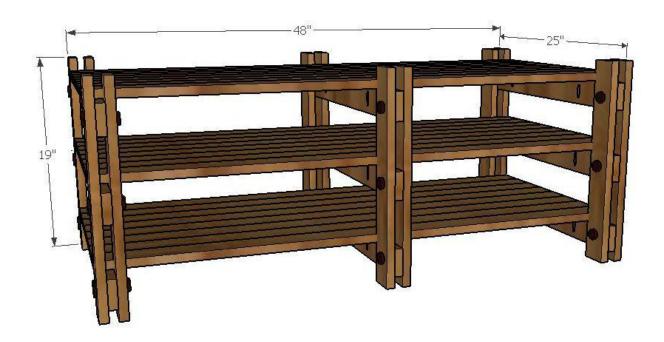

Arhaus Inspired Coffee Table

Copyright © 2015 Sawdust to Sequins

Tools

Saw to cut boards to length

Drill

Pocket Hole Jig

Sander for finishing wood

Supplies

18 - 1 ¼" Pocket Hole Screws Sandpaper


3/8" spade bit 18-3/8-in-16 x 3-in bolts

18-3/8-in-16 hex nuts 18-3/8-in x 7/8-in flat washers

Paint or stain 48- 1 ¼" wood screws

Optional: Spray paint for bolts, washers, and hex nuts if they are not available in the color of your choice. If spraying, do this before assembling the table. Give the paint plenty of time to dry.

Cut List

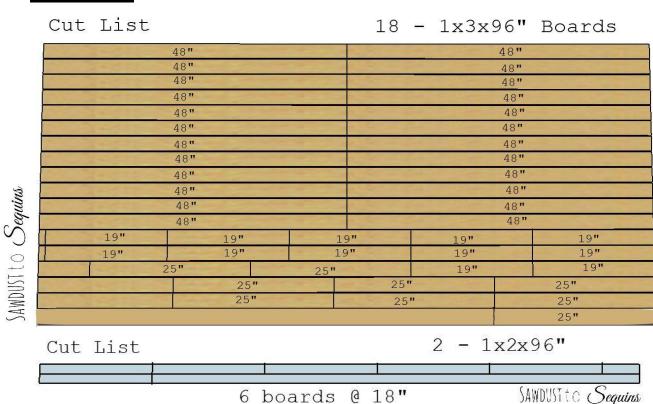

Step 1

Cut boards according to cut list.

Drill holes with 3/8" spade bit.

12 - @ 19"

9 - @ 25"

Step 2


Drill pocket holes in

the 25" boards.


They should be 6" from

the edge of each side.

Spade bit cuts

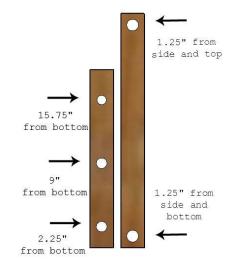

SAWDUST to Sequins

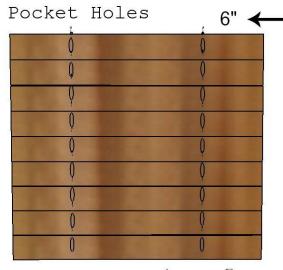


SAWDUST to Sequins

Step 3

Completely sand your boards and paint or stain. This is very difficult to do once the table is assembled.

Step 4

Place two of the 18" 1x2 boards across eight of your 48" 1x3 boards and screw in with 1 ¼" wood screws. Repeat until you have three shelf units. 1x2 boards should be placed 6" from each edge.

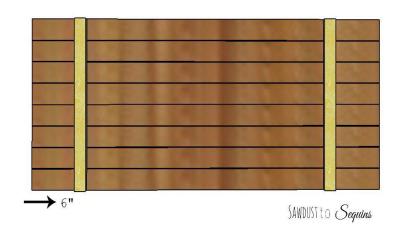

Step 5

Place 3 – 1x3 @ 25" between
3- 1x3 @ 19". Secure with a
bolt, washer, and hex nut.
The holes drilled with the spade
bit will be the placement of the
boards. Tighten the nuts to ensure
the stability of the table. Make three
of these.



Step 6

Attach the shelf units you assembled in step 4 to the leg supports with pocket hole screws.



*If some of your nuts and bolts have unpainted surfaces, spray paint on a foam or craft brush and wipe on. Allow adequate time to dry.

Have fun with this build and visit me @ SawdusttoSequins.com for more plans!!

Follow along on <u>Pinterest</u> and <u>Instagram</u> for my latest projects and behind the scenes pics of my builds.