

SAWDUST to *Sequins*

## Decorative Mirror

Copyright ©2015 Sawdust to Sequins

### Tools

Saw to cut boards to length

Pocket Hole Jig

Staple Gun


Sander

# Supplies

- 16 - 1 ¼" Pocket Hole Screws
- Sandpaper
- 1 - 12" x 12" Mirror Tile
- Caulk Gun
- Staples
- Paint or stain
- Mirror Mastic
- Wood Glue

# Cut List

- 1 – Tempered Hardboard @ 14" x 14"
- 2 – 1" x 2" x 96" Boards

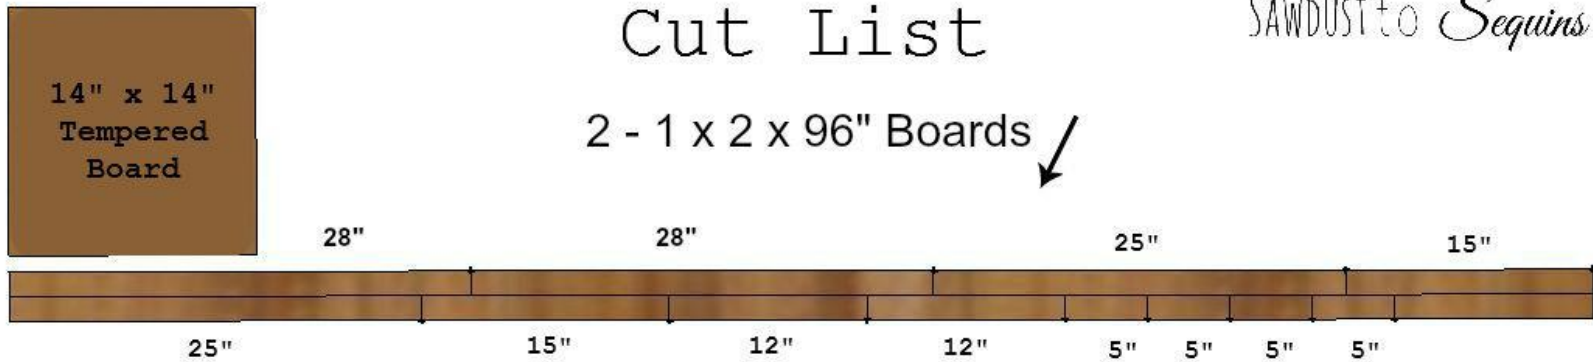


# Step 1

Cut all boards according to cut list.


# Step 2

Drill pocket holes in the 25", 12", and 5" boards.

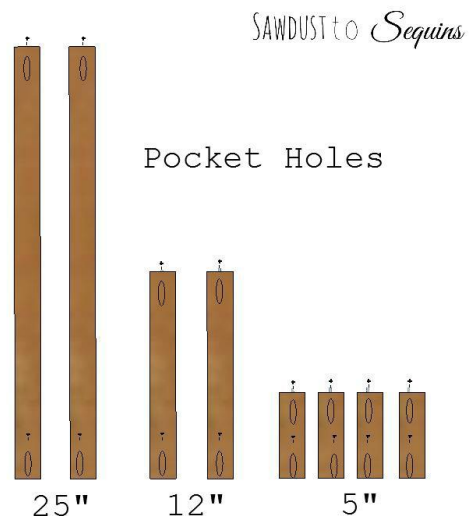

### Step 3


Assemble the outside frame of the mirror. Using pocket hole screws, attach the 28" and 25" boards together to form a square.

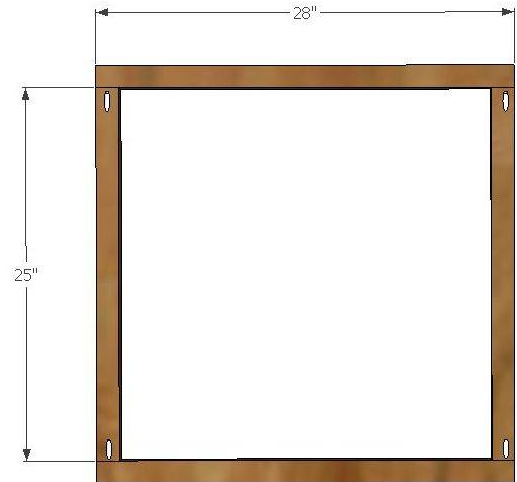

SAWDUST to Sequins

### Step 4


Assemble the inner frame using pocket hole screws to attach the 12" and 15" boards together to form a square.

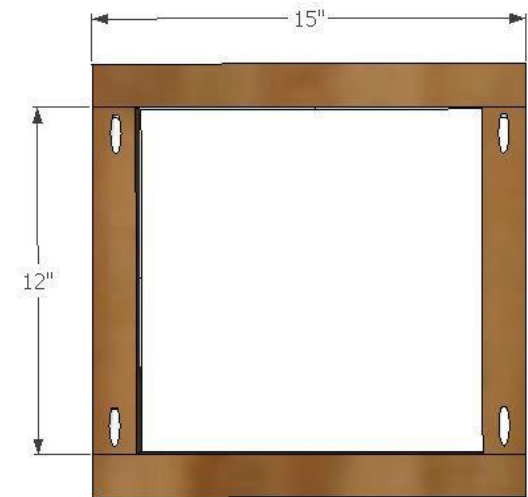

SAWDUST to Sequins

### Step 5


Attach the inner frame to the outer frame by screwing in the 5" 1x2 pieces in the middle of the outer frame. Attach using pocket hole screws.

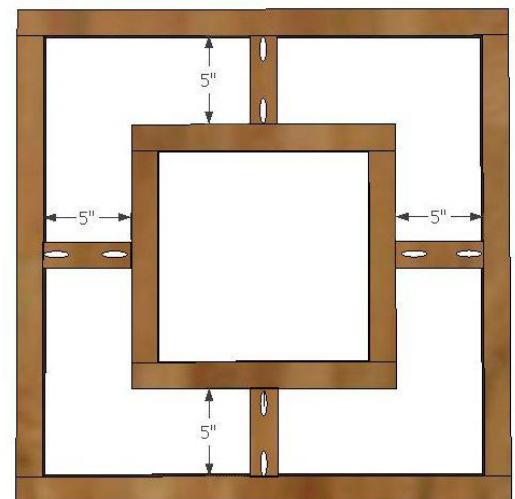

SAWDUST to Sequins

## Step 6

Place 14" x 14" piece of tempered hardboard on the back of the inner frame and attach with wood glue and a stapler.

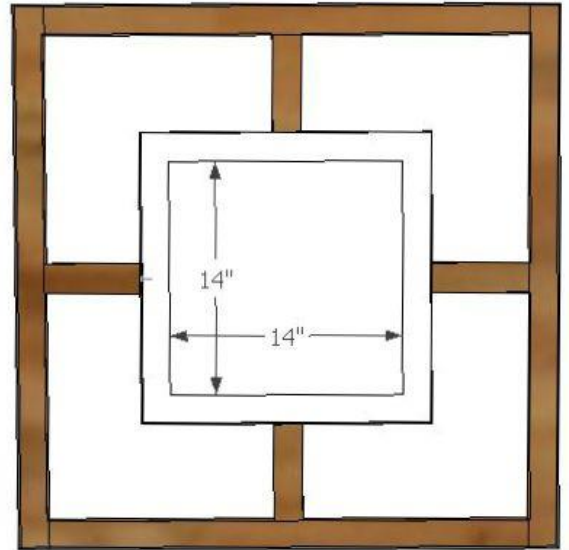

SAWDUST to *Sequins*

## Step 7

Sand and paint or stain your mirror frame. Do this before adding the mirror tile.

## Step 8

Place your frame with the front facing you and apply the mirror mastic on top of the plywood. Cover sufficiently, then place the mirror tile on top of the mastic and allow plenty of time to dry. Drying times are on the mastic container. Once dry, attach hanging hardware and enjoy!

Have fun with this build and visit me @ [SawdusttoSequins.com](https://www.sawdusttosequins.com) for more plans!!

Follow along on [Pinterest](https://www.pinterest.com) and [Instagram](https://www.instagram.com) for my latest projects and behind the scenes pics of my builds.